

## FRONT SIDE PIPE

| Accessory Name  | Parts Number  | Application Model | Issue Date | Publication No. | FRT   |
|-----------------|---------------|-------------------|------------|-----------------|-------|
| FRONT SIDE PIPE | 08F73-K2L-DD0 | ADV350A           | 2024.11    | MII             | 0.3 H |

### Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:


 
 



Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

### How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

### Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures. Refer to "Installation Instructions BASIC" for description of each symbol.

## INFORMATION

### CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

### NOTICE

- Take care not to damage the painted surfaces of the motorcycle.

### NOTE:


- Save all removed parts unless otherwise indicated.

## TORQUE INFORMATION



Refer to the Service Manual for the torque values including standard torque of the removed parts. ()

PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.

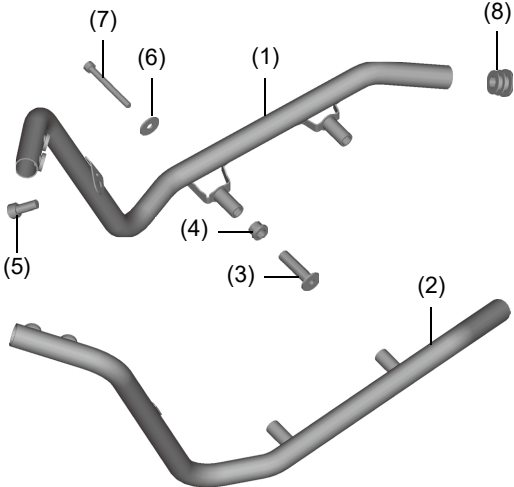
| Component   | No. | Parts Name            | Qty | Parts No.      |
|---|-----|-----------------------|-----|----------------|
|  | (1) | Right front side pipe | 1   | —              |
|   | (2) | Left front side pipe  | 1   | —              |
|   | (3) | Flange collar         | 4   | —              |
|   | (4) | Rubber cushion        | 8   | —              |
|   | (5) | 6 x 14 mm socket bolt | 2   | 96600-06014-07 |
|   | (6) | 6 mm plane washer     | 6   | 94103-06700    |
|   | (7) | 6 x 55 mm socket bolt | 4   | —              |
|   | (8) | Pipe end cap          | 4   | —              |

INSTALLATION
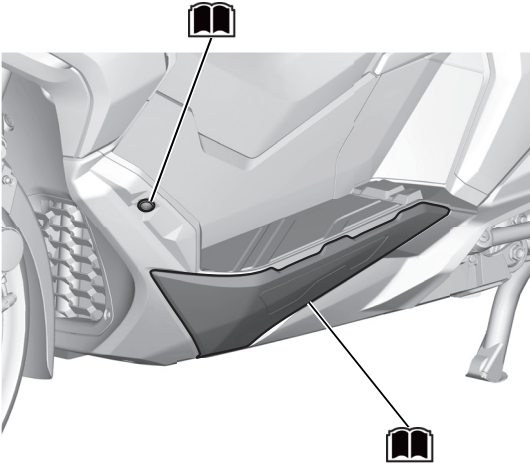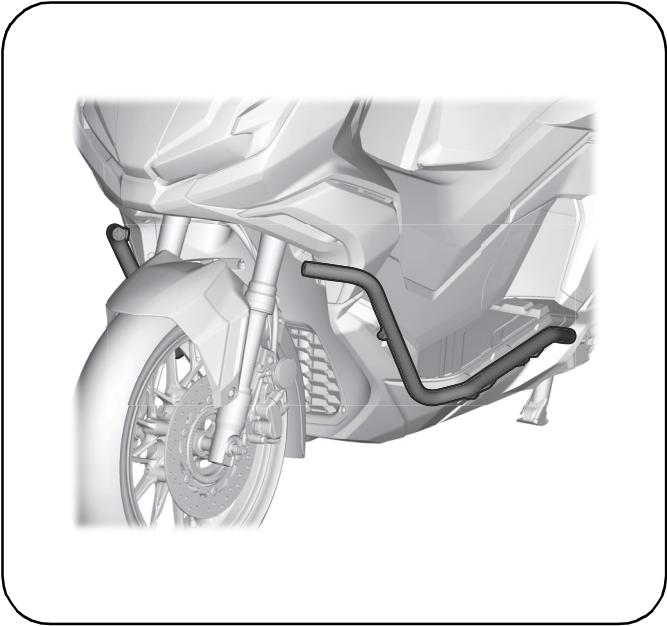
|   |   |
|---|---|
| 1.  | Refer to the Service Manual for motorcycle, remove the motorcycle parts as shown. (📖) |
| <div><div><p>&lt;LEFT SIDE&gt;</p></div><div><p>INSTALLATION IMAGE</p></div></div> |   |


2. Remove the motorcycle's parts and then reinstall the floor side cover as shown.

<LEFT SIDE>

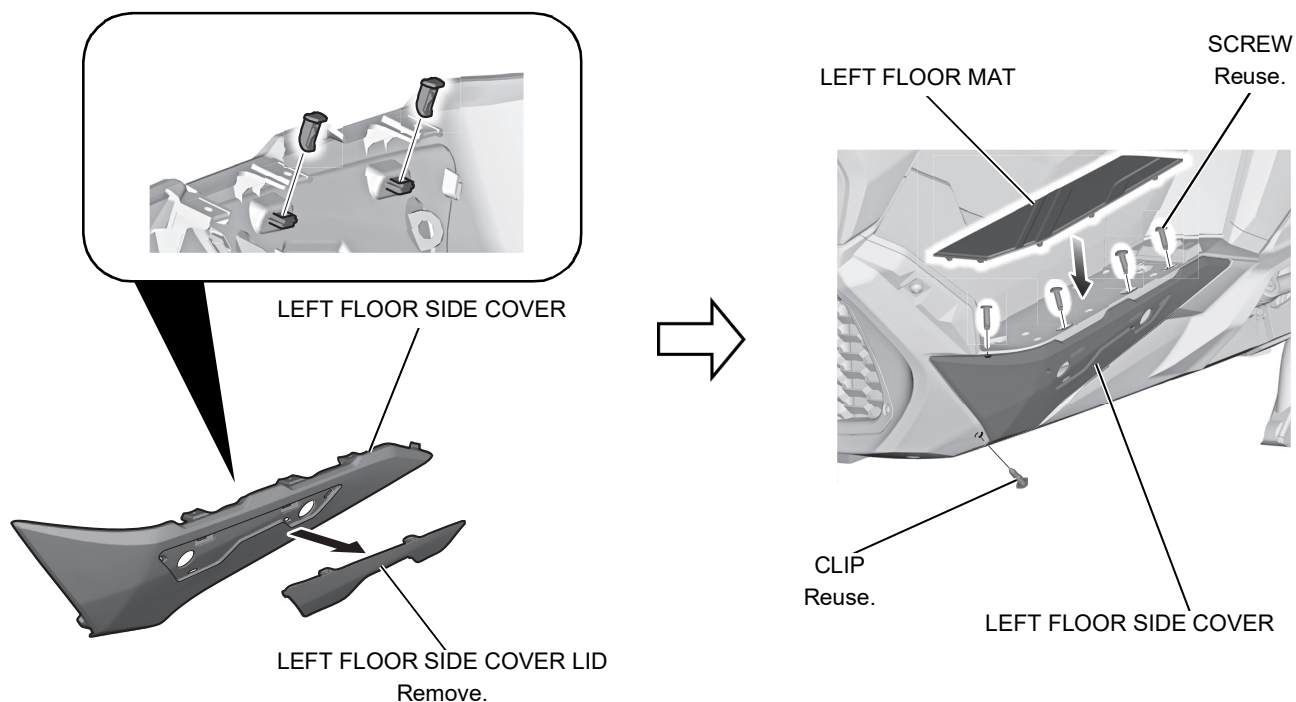


3. Install as shown.  
 • Degrease the front side pipe ends and then apply an adhesive in the dimension shown.

<LEFT SIDE>

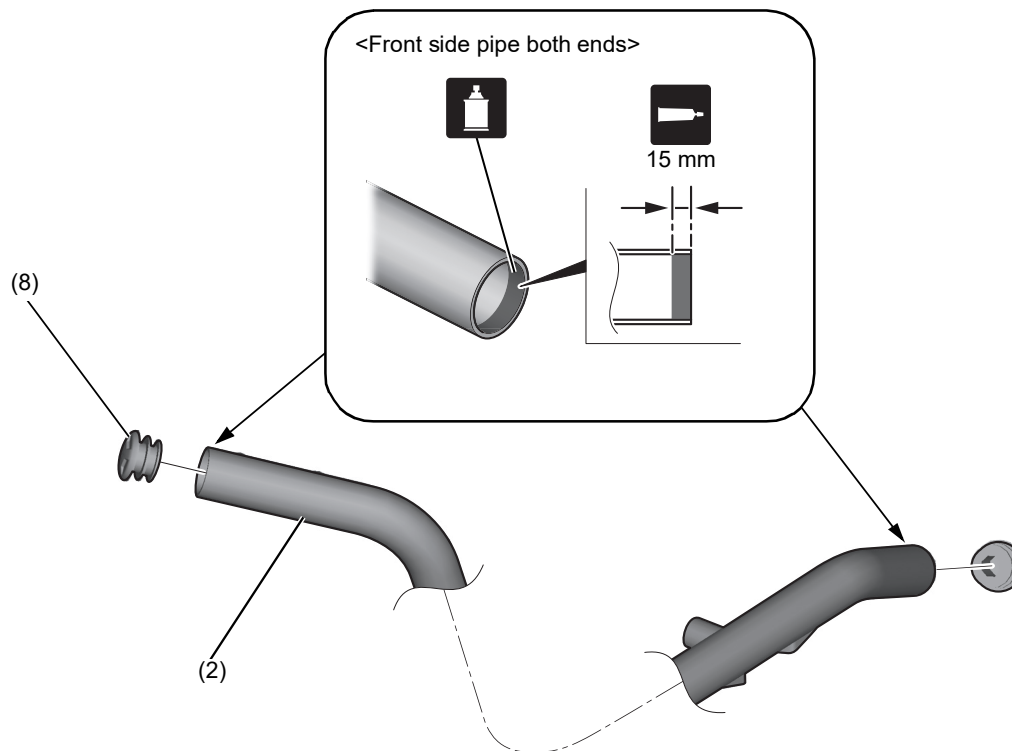

4. Loosely install as shown.

<LEFT SIDE>

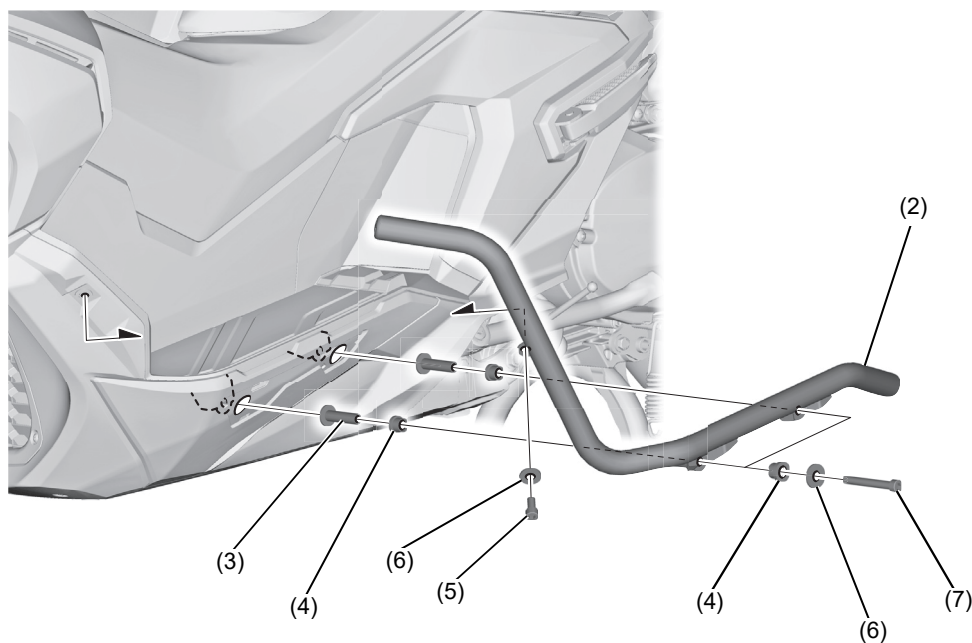

5. Tighten all loosely installed parts securely.

6. Install the right side pipe in the same manner as the left side.