

RIDER STEP

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
RIDER STEP	08R72-MKT-D00	ADV750/L	2024.7	MII	0.3 H

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:

Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures. Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTICE

- *Take care not to damage the painted surfaces of the motorcycle.*

NOTE:

- Save all removed parts unless otherwise indicated.

PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.

Component	No.	Parts Name	Qty	Parts No.
	(1)	Right step holder	1	08R08-MKT-D00
	(2)	Left step holder	1	-
	(3)	Right step bracket	1	08R06-MKT-D00
	(4)	Left step bracket	1	08R07-MKT-D00
	(5)	Spring pin	2	94305-30161
	(6)	Right step return spring	1	-
	(7)	Left step return spring	1	-
	(8)	Joint pin	2	-
	(9)	Split pin	2	94201-16150
	(10)	Washer (small)	2	94102-08800
	(11)	8 x 60 mm socket bolt	2	90112-MKH-D00
	(12)	8 x 75 mm flange bolt	2	90006-K64-305
	(13)	Collar	4	50352-MJP-G50
	(14)	Washer (large)	2	94103-08800
	(15)	Right step arm	1	08R10-MKT-D00
	(16)	Left step arm	1	08R11-MKT-D00


TORQUE INFORMATION

Refer to the Service Manual for the torque values including standard torque of the removed parts. (📖)


INSTALLATION

1. Remove the motorcycle parts as shown.
 - Repeat on the right side.


<LEFT SIDE>

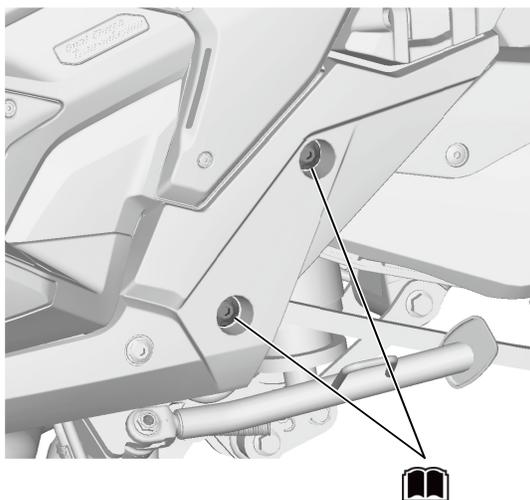


INSTALLATION IMAGE

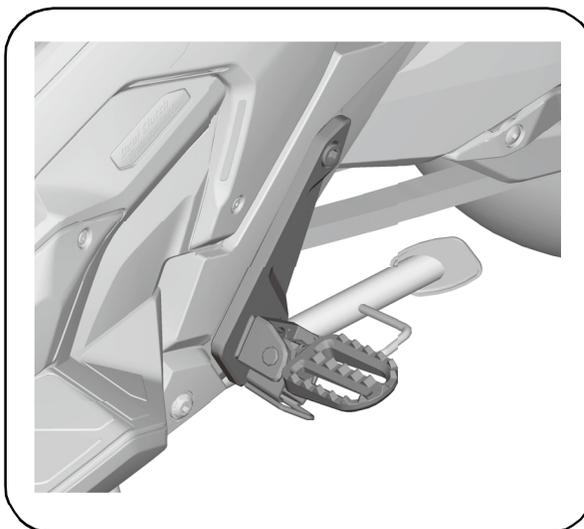


2. Install as shown.

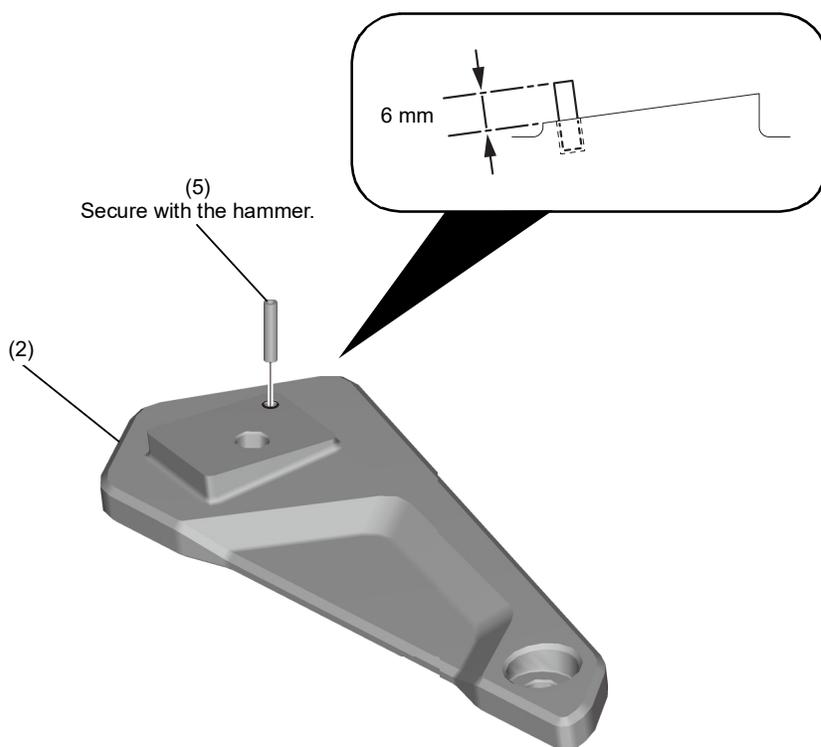

3. Loosely install as shown.

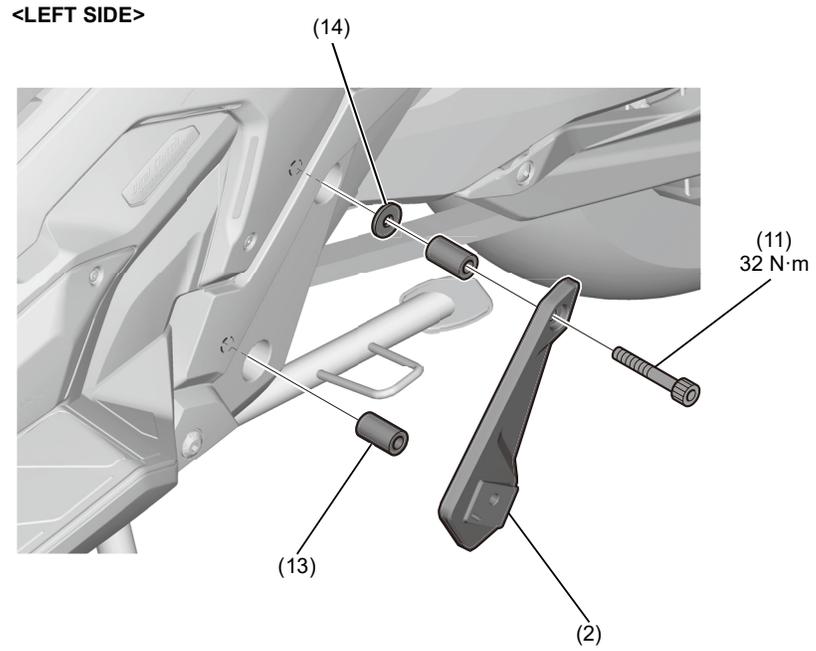



4. Loosely install as shown.

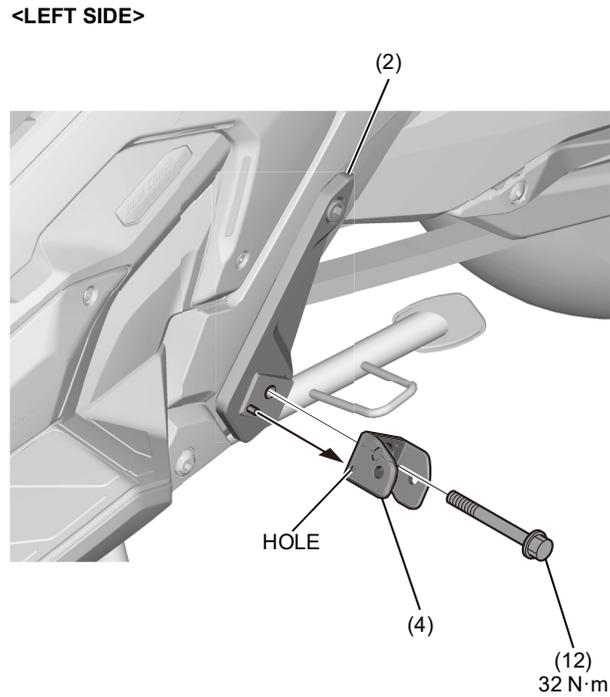



5. Tighten all loosely installed bolts securely.

6. Apply grease to the position shown.

<LEFT SIDE>

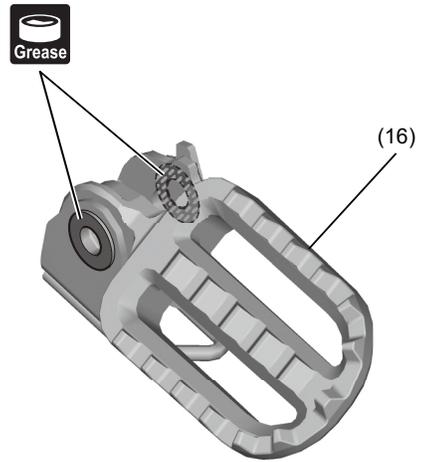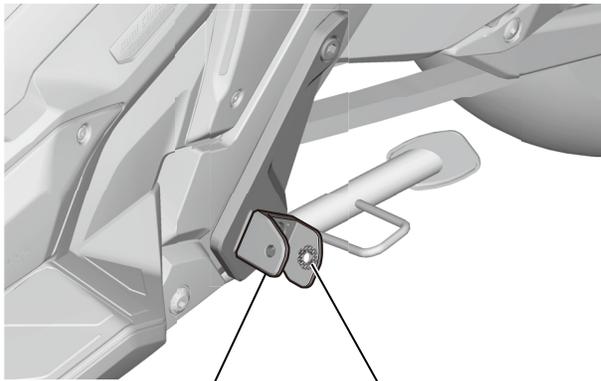

7. Apply grease to the position shown.

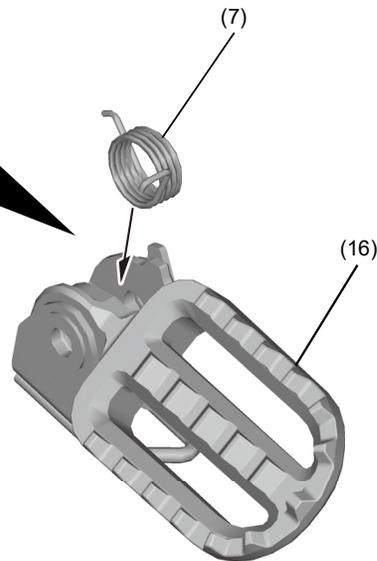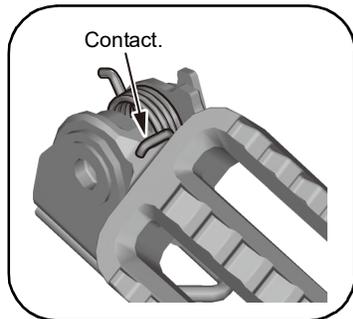


How to secure the step arm

- The step arm can be secured with the arm raised.

1. Raise the step arm until it stops.

<LEFT SIDE>

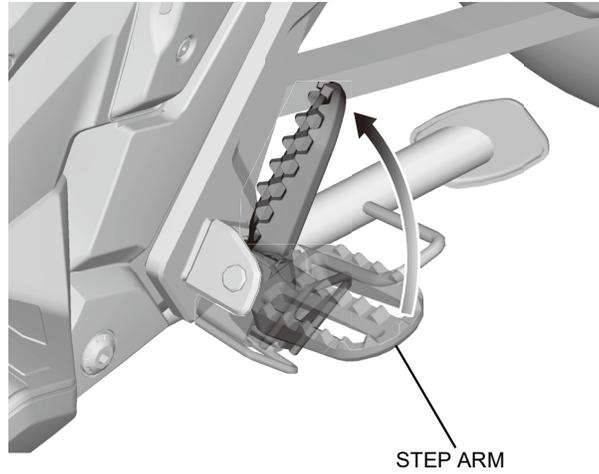

2. Lower the click lever.

<LEFT SIDE>

