

QUICK SHIFTER

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
QUICK SHIFTER	08U70-MLB-D00	CB750A	2024.10	MII	0.5 H

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:


 
 



Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures. Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


NOTICE

- Take care not to damage the painted surfaces of the motorcycle.

NOTE:


- Do not disassemble the stroke sensor.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- Trim the excess ends off the wire ties after attaching them to the wire harnesses. Do not allow the cut part of the wire tie to interfere with another harness or brake hose.
- Reinstall the removed parts on the motorcycle and make sure that wires and harnesses are not pinched.
- After reconnecting the battery, refer to the motorcycle Owner's Manual and set the meter.
- After this accessory installation, check the lights (e.g. right/left turn signal lights and brake lights) for proper operation.
- Save all removed parts unless otherwise indicated.

TORQUE INFORMATION

Refer to the Service Manual for the torque values including standard torque of the removed parts. ()


PARTS LIST


When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.

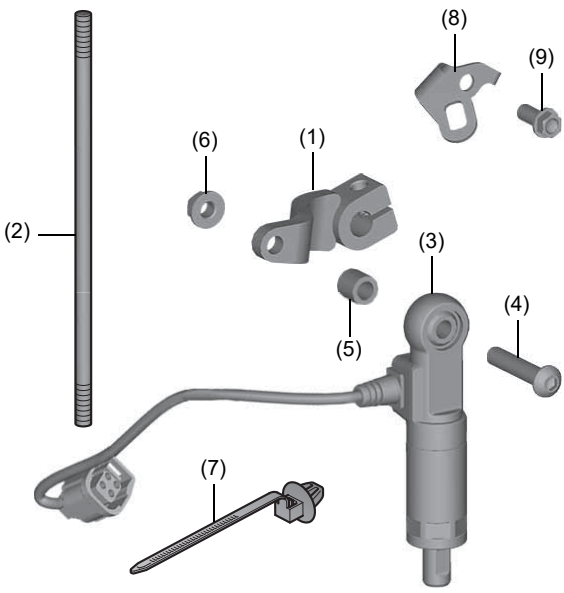Component	No.	Parts Name	Qty	Parts No.
	(1)	Gear change arm	1	—
	(2)	Tie rod bolt	1	—
	(3)	Stroke sensor	1	—
	(4)	7 x 35 mm socket bolt	1	—
	(5)	Collar	1	—
	(6)	7 mm flange nut	1	90202-KV3-000
	(7)	Clip band	1	91540-TAA-003
	(8)	Stay	1	—
	(9)	6 x 14 mm SH flange bolt	1	90021-GHB-630


INSTALLATION

1.


Refer to the Service Manual for motorcycle, remove the motorcycle parts as shown, and disconnect the negative (-) cable from the battery. 

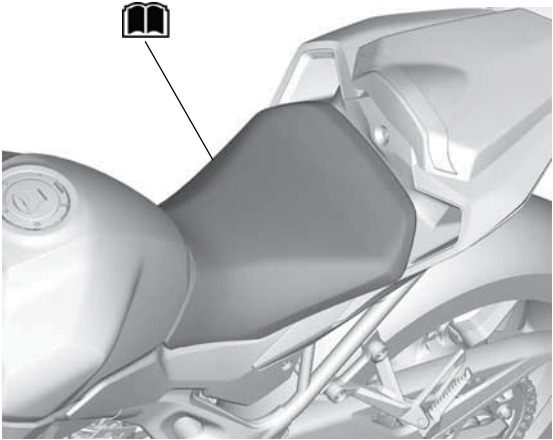


INSTALLATION IMAGE

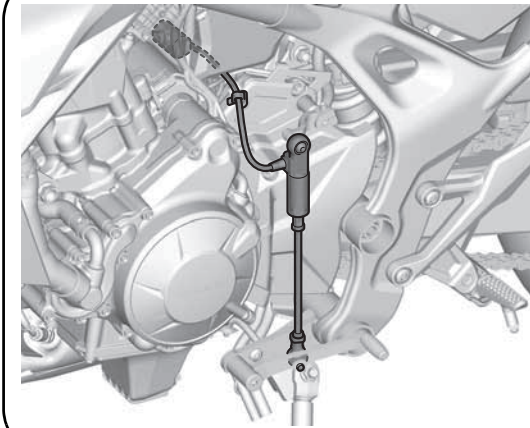


2. Refer to the Service Manual for motorcycle, remove the motorcycle parts as shown. (📖)

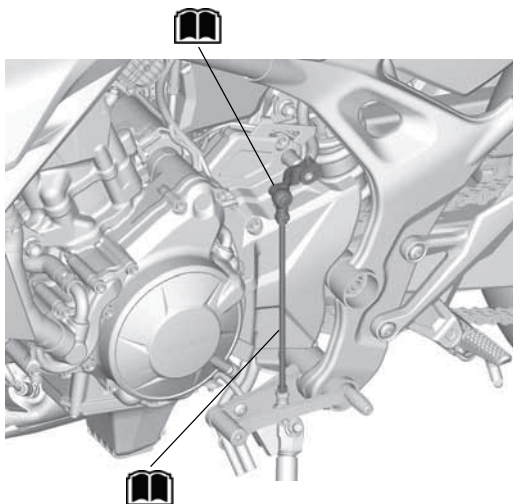


Mark at the original height of the gearshift pedal as shown.

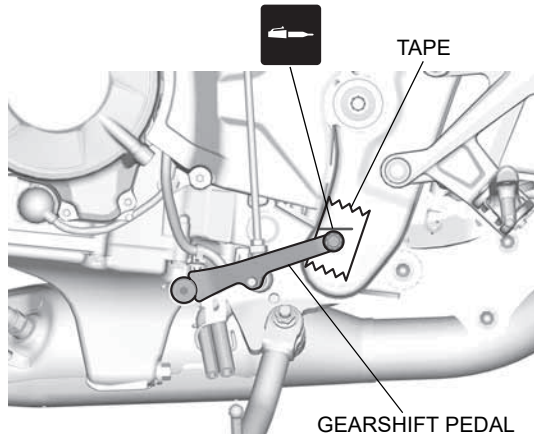


3. Refer to the Service Manual for motorcycle, remove the motorcycle parts as shown. (📖)

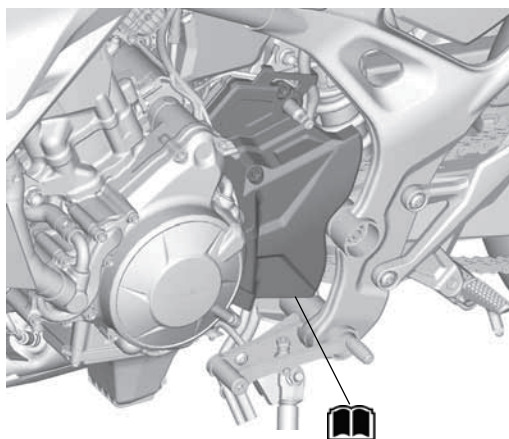


4. Fix the harness as shown.
- Cut off the excess end of the wire tie, leaving a maximum of 5 mm.

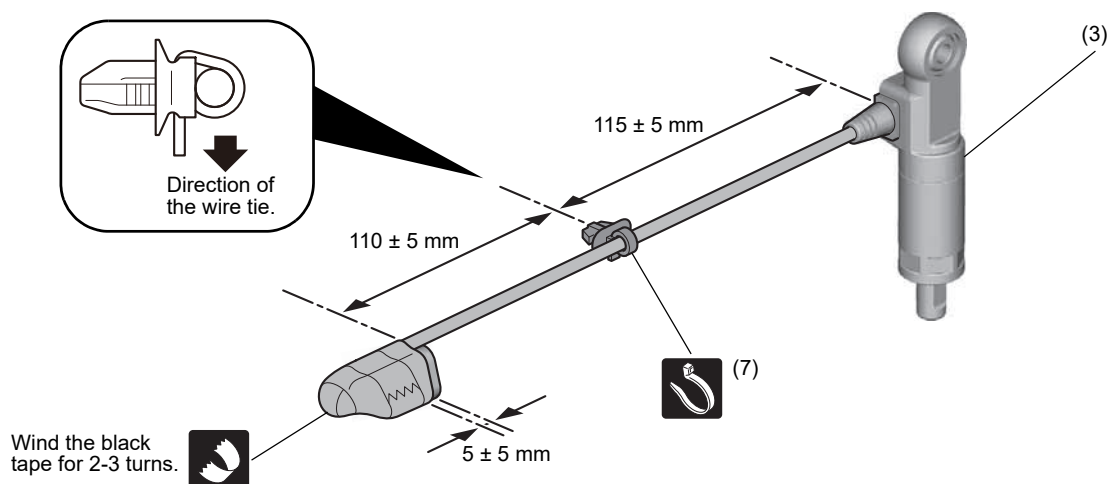

5. Install as shown.

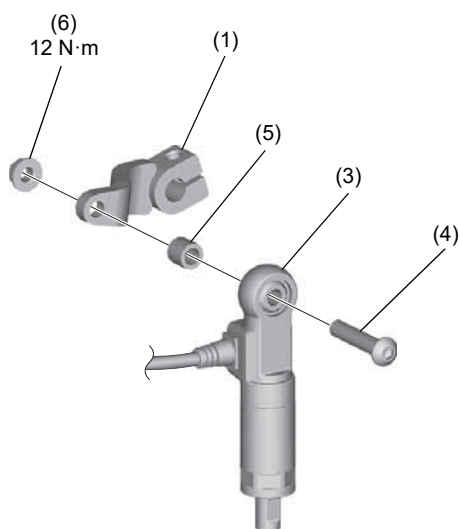


6. Install as shown.

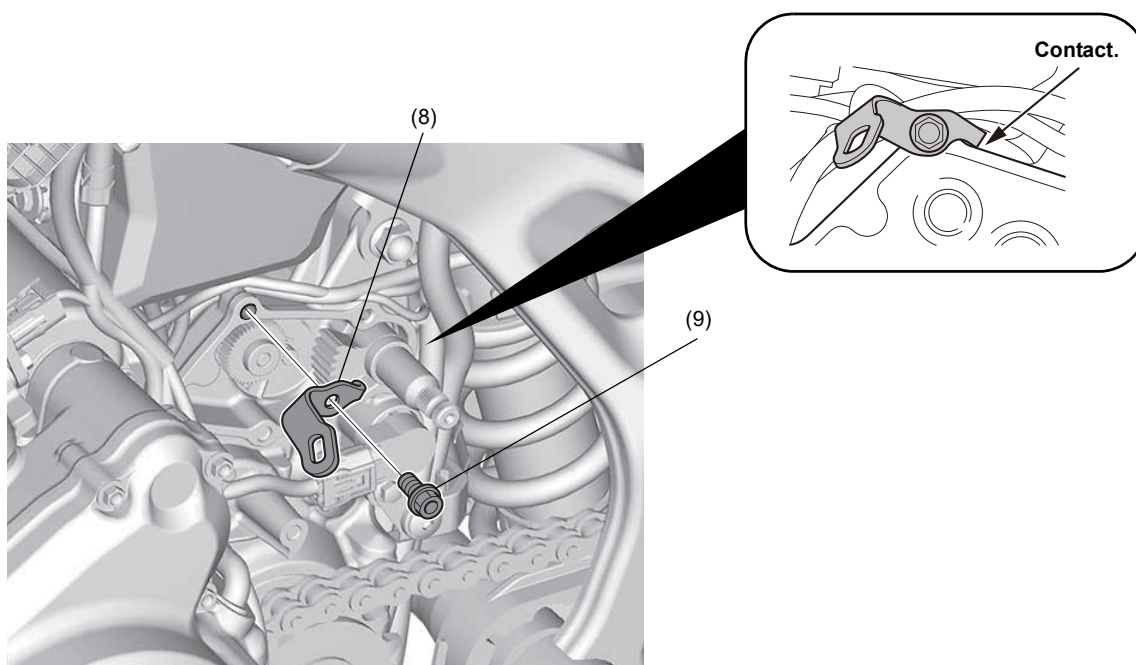

7. Pull the harness out and connect it as shown.


<LEFT SIDE>

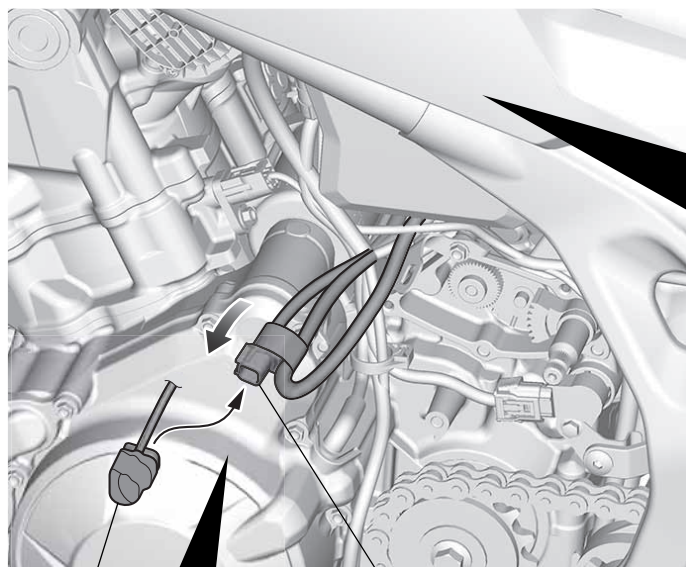

(3)

MOTORCYCLE'S
CONNECTOR


DUMMY
CONNECTOR

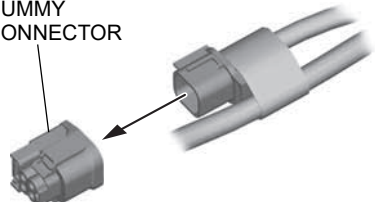

First, disconnect the CKP sensor connector as shown.

<RIGHT SIDE>


CKP SENSOR
CONNECTOR

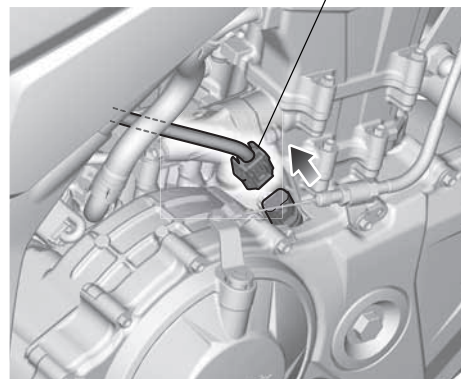

8. Install the motorcycle's harness in the reverse order of removal.

9. Install the sprocket cover in the reverse order of removal.

10. Install as shown.

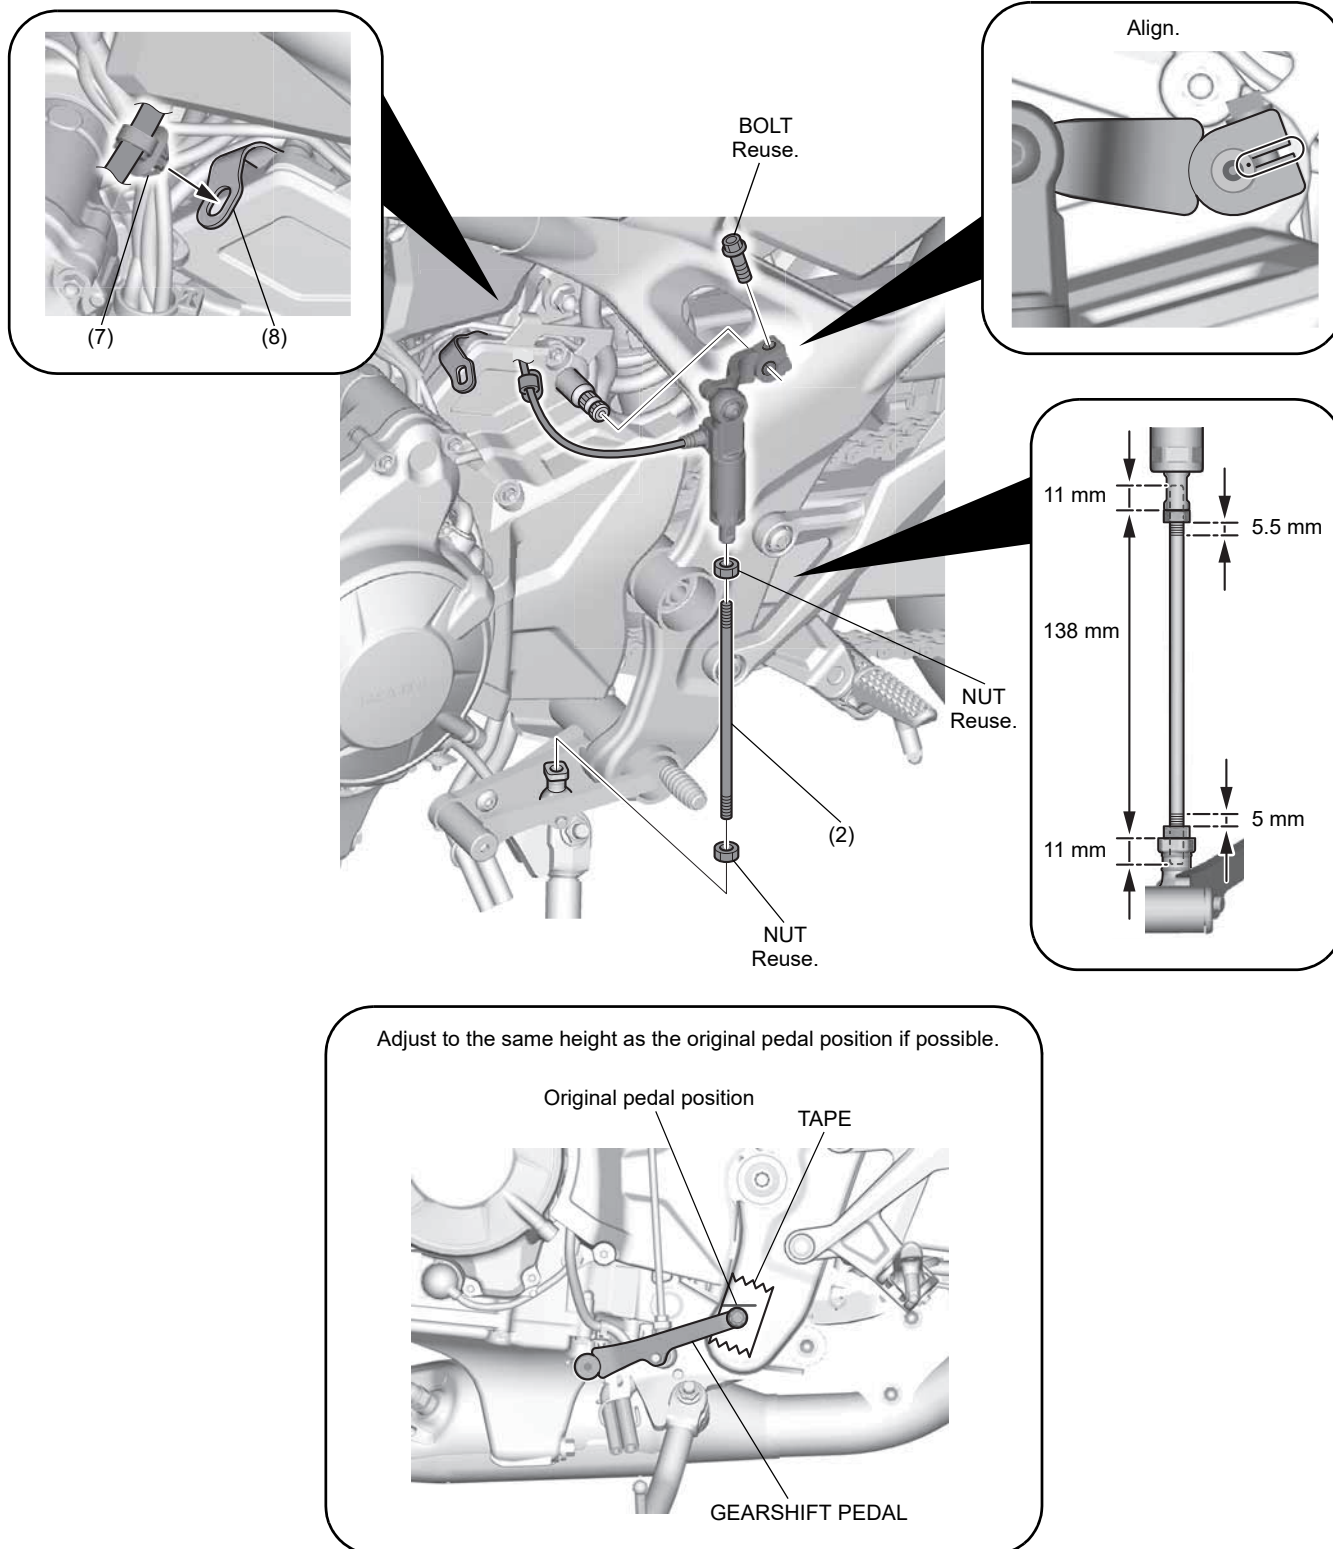


11. Install the motorcycle's parts in the reverse order of removal.



- Confirm that any harness is not caught or too tight.

SETTING INSTRUCTIONS


1. Remove the front seat and connect the SCS short connector (070MZ-0010300).
2. Turn the ignition switch ON with the engine stop switch RUN, but do not start the engine.
3. Display the "SETTING" using the Sel switch.

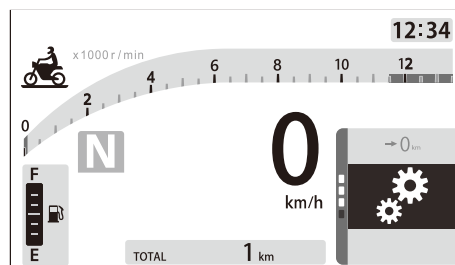

4. Select the SERVICE and EQUIPMENT.

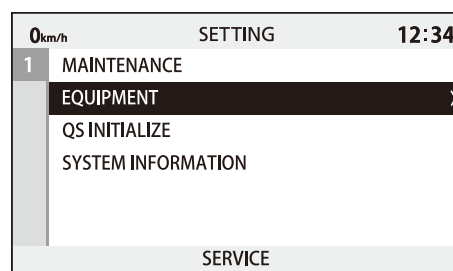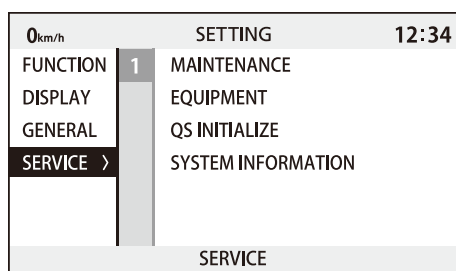


5. Set ON. (After removing the quick shifter, set OFF.)

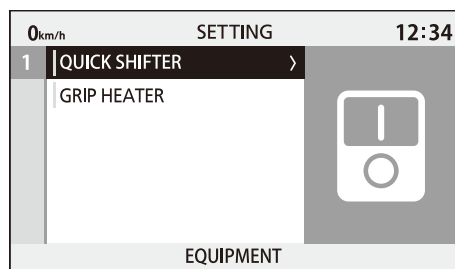


6. After setting the quick shifter equipment, push the Sel left switch several times to return to the top screen.
7. Turn the ignition switch OFF and remove the SCS connector.

INITIALIZATION INSTRUCTIONS


1. Remove the front seat and connect the SCS short connector (070MZ-0010300).
2. Turn the ignition switch ON with the engine stop switch RUN, but do not start the engine.
3. Push the Sel right switch to shift to the setting mode.
4. Select the SERVICE, QS INITIALIZE, and then push and hold Sel right switch to select INITIALIZE OK.

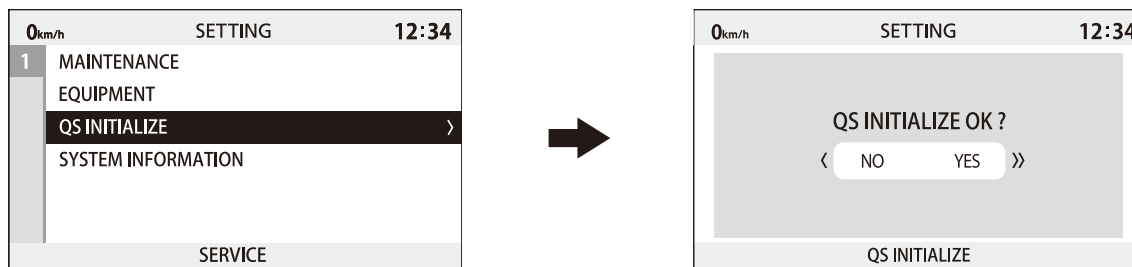


5. Initialization ready.

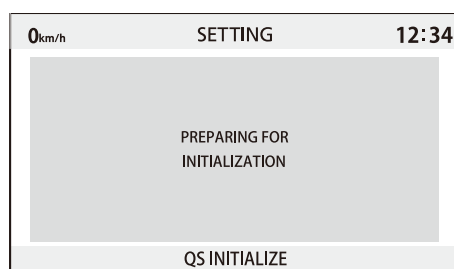



6. Start the engine and let it idle.
 - Hold the neutral gear position.

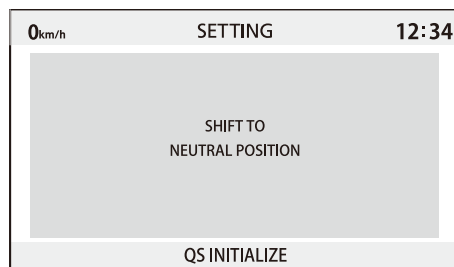

7. Wait until switched to the display shown.

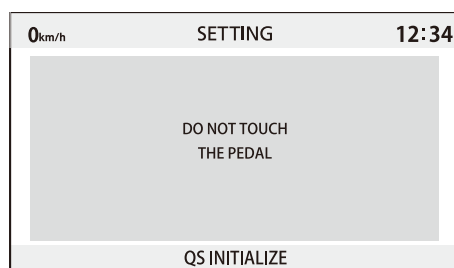

8. Wait until switched to the display (initialization completion) shown.
- If the initialization failure, restart the initialization again.
 - If repeated initialization is not completed, check the installation state of the stroke sensor.

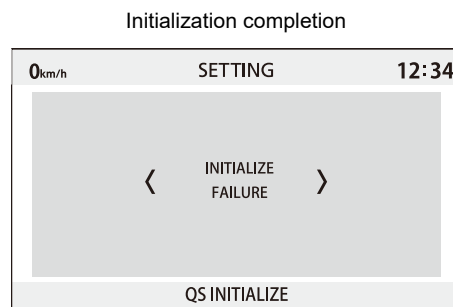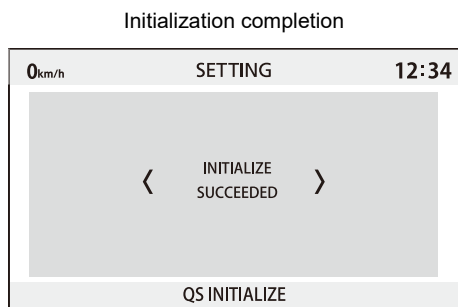

9. Turn the ignition switch OFF and remove the SCS short connector.