



# INSTALLATION INSTRUCTIONS

Accessory

BACKREST  
P/N 08R73-K87-A30

Application

CM300

Publication No.


MII

Issue Date

December 2020

Honda Dealer: Please give a copy of these instructions to your customer.

## PARTS LIST

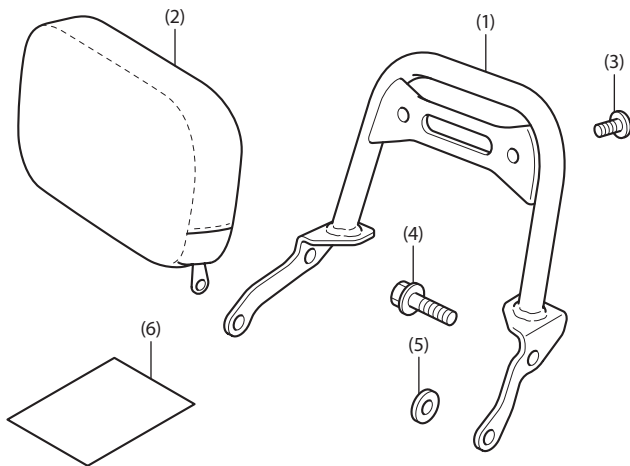

| No. | Description                  | Qty |
|-----|------------------------------|-----|
| (1) | Backrest                     | 1   |
| (2) | Pad                          | 1   |
| (3) | 6 mm socket bolt (6 x 9 mm)  | 2   |
| (4) | 8 mm flange bolt (8 x 20 mm) | 2   |
| (5) | 8 mm washer                  | 2   |
| (6) | URL paper                    | 1   |

REAR CARRIER  
Sold separately

- For the installation, refer to the rear carrier Installation Instructions.

## TOOLS REQUIRED

Socket (12 mm)

Ratchet

Hex wrench (5 mm)

Torque wrench

## TORQUE INFORMATION

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

| Item                     | N·m | kgf·m | lbf·ft |
|--------------------------|-----|-------|--------|
| 6 mm socket bolt         | 10  | 1.0   | 7      |
| 8 mm flange bolt and nut | 27  | 2.8   | 20     |

## INSTALLATION


### ⚠ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


### NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
- Save all removed parts unless otherwise indicated.


- Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

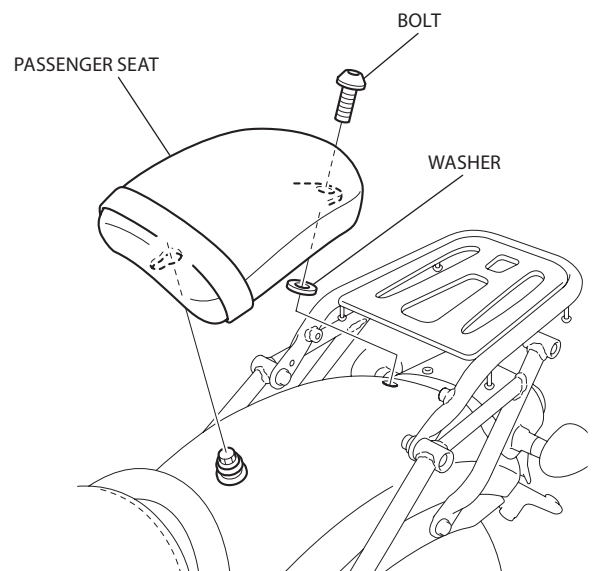

- Assemble the backrest as shown.

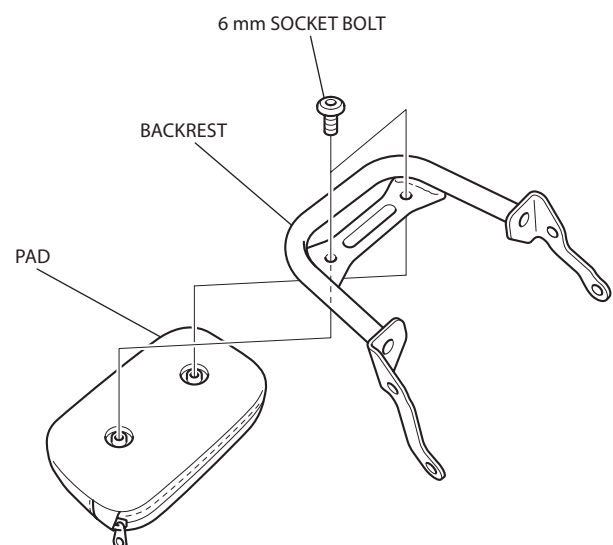

3. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
- Repeat on the right side.

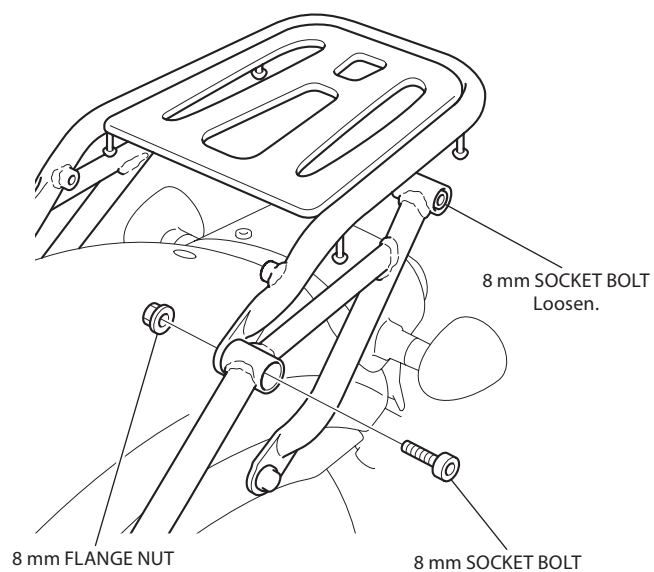

4. Install the backrest assembly as shown.
- Repeat on the right side.

